

TECHNICAL INSTRUCTIONS

DIVISION 4

PROGRAMME METER AMPLIFIERS

CONTENTS

4.1	Programme Meter Amplifiers	Pentode Type
4.2	Programme Meter Amplifiers	Grid Current Type
4 (PM/1)	Programme Meter Amplifier	PM/1
4 (PM/2)	" " "	PM/2
4 (PM/3)	" " "	PM/3
4 (PM/4)	" " "	PM/4
4 (PM/5)	" " "	PM/5
4 (PM/6)	" " "	PM/6
4 (TPM/1)	Test Programme Meter Amplifier	TPM/1
4 (TPM/2)	Test Programme Meter Amplifier	TPM/2
4 LVM/2	LINE VOLUME METER	LVM/2